Print on plain white paper - Part # 122919

INSTALLATION AND CLEANING INSTRUCTIONS
Cuspidor Drain Valve Kit No. 152472

Installation Instructions

1. Drill a 9/64" hole in the vertical post approximately 4-1/4" above the bottom of the assistant's console. Use the bracket as a template to position the hole horizontally.
2. Attach the valve assembly to the post using a #8 x 5/8" phillips button head self tapping crew (provided).
3. Splice into the main vacuum line by cutting the line and then attaching the ends to the black plastic tee (with plastic sleeves provided) as shown.
4. Disconnect the cuspidor drain tube from the umbilical tubing. Then attach the cuspidor drain tube to the valve assembly drain tube.
5. Remove the plastic plug in the front panel of the assistant's console and mount the flush valve and button as shown.

IMPORTANT: Leave the barbed hose fitting, on the end of the flush valve, loose to allow the fitting to act as a bleed.

6. Attach the small vacuum tubes as shown in the illustration

Cleaning Procedure

NOTE: The screen inside the plastic bowl should be examined daily and cleaned when necessary.

1. Flush the system by holding in the flush button and pouring warm water into the cusidor.
2. continue to hold the button until all the water has been removed from the system.
3. Unscrew the plastic bowl and rinse out the screen.

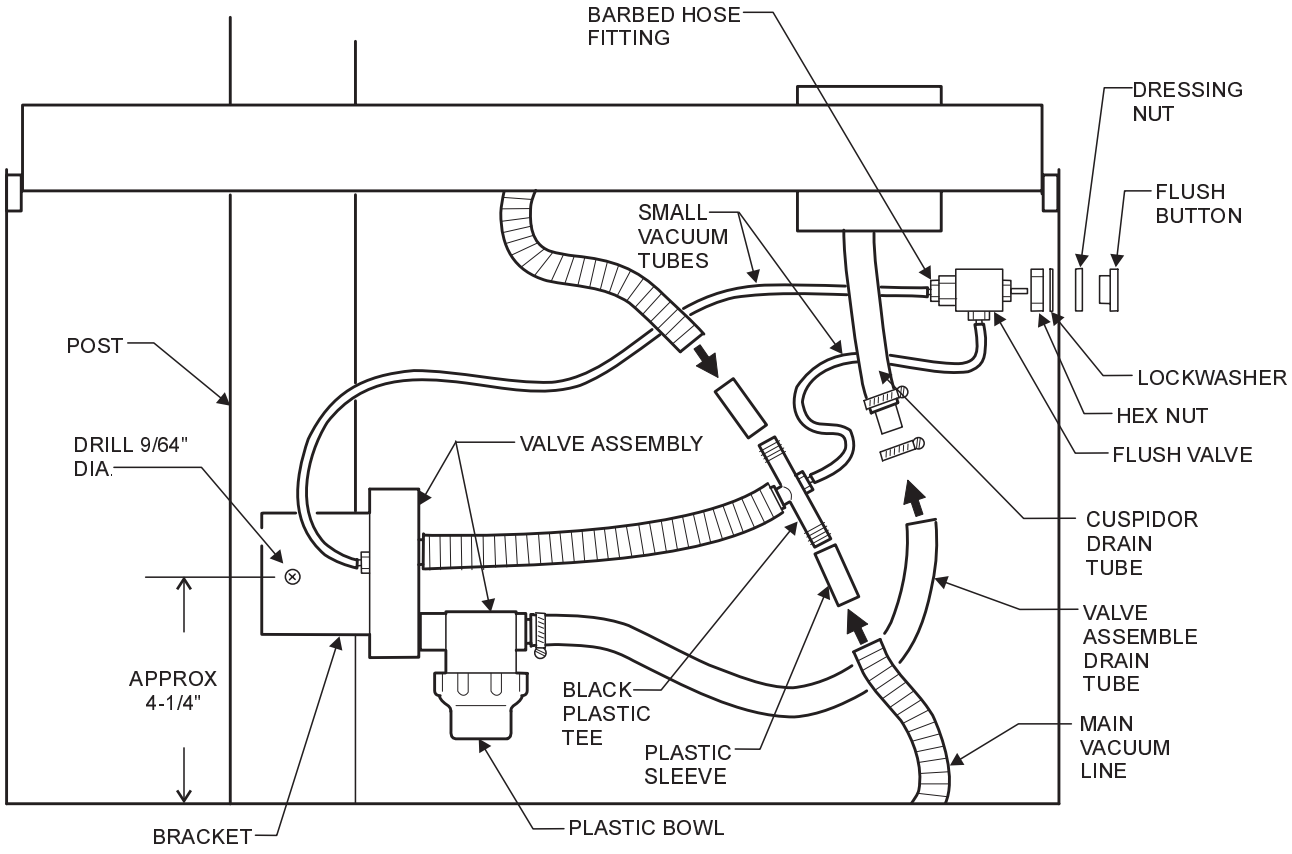

ILLUSTRATION OF THE INTERIOR OF THE ASSISTANT'S CONSOLE

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542